QUICK GUIDE (continued on page 22)

Setting the clock:
1. Press ●, move to ⏱, press ●.
2. Scroll blinking field with ◄. Step to next field with ►.
3. Press ●.

Show time and date: Press ▬.

Stop alert signal:
Press any button.

Display message:
Press ▬, select message with ◄ or ►, press ▬ several times.

Lock displayed message:
Press ●, move to 🔒, press ●.
To unlock: Repeat the same steps.

Delete displayed message:
Press ●, move to 🗑, press ● twice.

Delete all messages:
Press ●, move to 🗑, press ● twice.

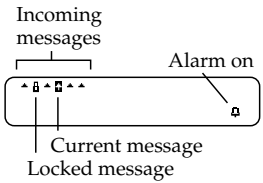

Telia VM -95
User's Manual

telia

English version of
LZTA 804 3235, 95-06

CONGRATULATIONS ON CHOOSING TELIA VM -95

Telia VM -95 pagers use the Telia Mobitel Minicall network, which means that you can be reached in all densely-populated areas where 90 % of Sweden's inhabitants live.

Telia VM -95 can receive messages on two different systems—Minicall Numeric and Minicall Alphanumeric. The first is a numeric service, which means that the person paging you can send a numeric message at the same time, usually the telephone number for you to call. On the other system, Minicall Alphanumeric, you can also receive text messages. The pager has a different paging number for each system.

You can also use Telia VM -95 as a clock with a reminder signal (alarm).

IF YOU'RE IN A HURRY

First read the instructions for setting the clock on page 5. Then use the Quick Guide on the back cover.

CONTENTS

Installation 4
- Battery Information 4
- Setting the Clock: 5

Overview 6
To page you 7
- Numeric paging 7
- Alphanumeric paging 7

Receiving and Reading Your Messages ... 8
Backlighting 9
Locking Messages 10
Deleting Messages 11
Turning Your Pager Off 12
Additional Programming 13
- Changing the Alert Mode (Vibration/Audible) 13
- Setting the Alert Pattern 14
- Setting the Alarm 15
- Setting the Auto On/Off function 16

Other Features 18
Tips 19
- Call diversion 19
- Mobilsvar (=Voice Mailbox) 19
- Digital messages other than the telephone number 20
- Instructions on your business card .. 20
- Paging number in telephone directory 21
- Special Minicall Services 21

If you have any questions 21
Technical data 22
Quick Guide (continued on page 22) 24

INSTALLATION

Battery Information

Your Telia VM -95 pager is designed to operate with a AAA-size alkaline battery (do not use carbon zinc batteries). See diagram for battery door location. To install or replace the battery, place the pager face down in the palm of your hand.

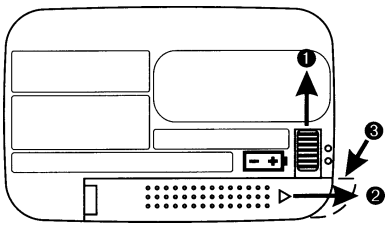

1. Unlock the battery door by sliding the door latch up with your thumb.
2. Slide the battery door to your right (toward the outer edge).
3. Lift the battery door toward you.

CAUTION: Do not insert the battery backwards. All messages stored and/or locked in memory will be erased.

Setting the Clock:

- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the left directional button ◄ to move the cursor to the Set Clock icon .
- Press the FUNCTION/SELECT button ● to display the Set Time screen. The cursor flashes in the hour position.
- The left directional ◄ button increments the flashing digits. This is defined by the icon **+** shown above the button.
- Advance to the desired minute by pressing the right directional button ►. This is defined by the icon ✣ above the button.
- Repeat the process for each field hour, minute, AM/ PM/24 hr., day/month/ year.
- Press the FUNCTION/SELECT button ● to initiate the change.

To see the time and date, press the READ/RESET button ▬.

OVERVIEW

Pager Controls

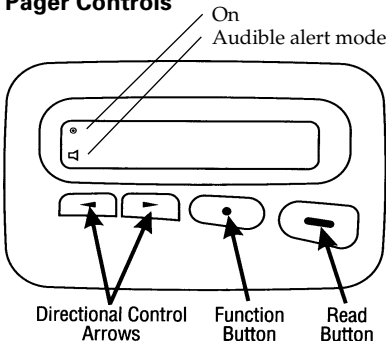

Display Icons

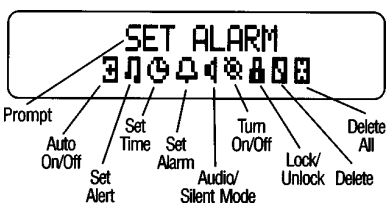

TO PAGE YOU

Numeric paging

To page you, the caller must dial code 0746 followed by your personal number for numeric paging. A recorded announcement gives the following message:

Welcome to the MBS and Minicall service. Dial your telephone number complete with area code. Finish with #.

When the caller has carried out the instruction, the following message is heard:

Paging now, please hang up.

Your pager should vibrate or sound within a few minutes.

Alphanumeric paging

There are two ways of using alphanumeric paging. Up to 400 characters can be sent.

Alt. 1: Minicall Alphanumeric via computer

A special transmitter subscription is required.

Alt. 2: Minicall Alphanumeric via Telia Mobitel Personal Message Service

Anyone wanting to send you a text message must ring 0740-99 88 77, give the operator your paging number for alphanumeric paging and dictate the text for the operator to send.

RECEIVING AND READING YOUR MESSAGES

When receiving a message, your pager alerts and displays the incoming message symbol for approx. ten seconds. Then a flashing ON symbol indicates that there is an unread message.

- Press any button to stop the alert.

A flashing ON symbol indicates a message has been received, but not read. Your pager beeps at predetermined intervals to remind you of an unread message.

- Press the READ/RESET button to display your message.

  If more than one message exists in your pager's memory, press the left or right directional arrow buttons to select the message you wish to read. The reversed arrow cursor indicates the location of your message in memory.

- **Alt. 1, Numerik**: Press once again to see the time and date it was received.

  Alt. 2, Text: The flashing arrow at the bottom right corner of the screen indicates the message you received continues beyond the first two lines of the display. Each press advances the message to the next two lines. Press and hold the READ/RESET button to rapidly scroll through your message. Finally the time and date it was received are displayed.

BACKLIGHTING

To view your display in low light conditions, turn on your pager's backlight by pressing and holding the FUNCTION/SELECT button for 1.5 seconds.

If no further buttons are pressed, the backlight automatically turns off when the display goes blank. You can also turn off the backlight by pressing and holding the FUNCTION/SELECT button for 1.5 seconds.

LOCKING MESSAGES

To lock

Up to 10 messages can be "locked" in memory, preventing them from being replaced when memory is full or from being deleted if the "DELETE ALL" function is chosen.

- Press the READ/RESET button once or twice.
- Select the message you wish to lock by using the left ◄ or right ► directional buttons.
- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the right directional button ► to move the cursor to the lock icon.
- Press the FUNCTION/SELECT button ● to lock the message. The padlock icon appears, indicating the message has been locked.

To unlock

To unlock a locked message, use the same procedure outlined above.

DELETING MESSAGES

To delete one message

You can delete an unlocked message:

- Press the READ/RESET button once or twice.
- Select the message you wish to delete from memory by pressing the left ◄ or right ► directional buttons.
- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the right directional button ► to move the cursor to the DELETE icon .
- Press the FUNCTION/SELECT button ● to receive confirmation of delete request.
- Press the FUNCTION/SELECT button ● to delete the message.

To delete all messages

If you wish to delete all unlocked messages from memory:

- Press the FUNCTION/SELECT button ●.
- Press the right directional button ► to move the cursor to the Delete All icon .
- Press the FUNCTION/SELECT button ● twice.

TURNING YOUR PAGER OFF

- Press the FUNCTION/SELECT button ● to display the function menu.
- The OFF icon flashes when this menu item first appears.
- Press the FUNCTION/SELECT button ● to select the "TURN OFF" function. Press it again to turn the pager off.

Turning the Pager On

- Press the READ/RESET ▬ button. Your pager will alert and show the ON indicator ⊙ in the upper left corner of the display. Then the time and date appear at the bottom of the display

ADDITIONAL PROGRAMMING

Changing the Alert Mode (Vibration/Audible)

- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the left directional button ◄ to move the cursor to the speaker or speaker slash icon.

  The speaker icon appears if the pager already is in the silent alert mode (prompting you to enter that mode, if desired). The speaker slash icon appears if the pager is in the audible alert mode (prompting you to enter that mode, if desired).
- Press the FUNCTION/SELECT button ● to select the desired alert.

Setting the Alert Pattern

- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the left directional button ◄ to move the cursor to the alert ♫ icon.
- Press the FUNCTION/SELECT button ● to display the "SET ALERT" screen. The selected alert number flashes
- Move to the desired alert and press the FUNCTION/ SELECT button ● to initiate the alert change. A 2 second sample of the selected alert plays through the internal speaker.

NOTE: To escape without making any changes, press the READ/RESET button ▬.

Setting the Alarm

If you wish to set the alarm:

- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the left directional button ◄ to move the cursor to the alarm 🔔 icon.
- Press the FUNCTION/SELECT button ● to display the set alarm screen.
- When the screen first appears, the cursor will be at the left-most position. This icon defines the alarm status: either alarm enable 🔔, or alarm disable 🔕. Press the left directional button ◄ to toggle the alarm status.
- Press the right directional button ► to move the cursor to the hour field. The left directional button ◄ increments the flashing digits.
- Repeat the process for each field (hour, minute).
- Press the FUNCTlON/SELECT button ● to make the change.

The alarm indicator 🔔 appears in the lower right corner of the display if an alarm has been set. At the selected time, your pager either vibrates or emits a unique 8-second alert, depending on the alert mode.

Setting the Auto On/Off function

During certain hours of the day you may not want to be paged, and at the same time want to save battery life.

- Press the FUNCTION/SELECT button ● to display the function menu.
- Press the left directional button ◄ to move the cursor to the AUTO ON/OFF icon .
- Press the FUNCTION/SELECT button ● to display the Auto On/Off screen.

  When the screen first appears, the cursor will be at the left-most position. This icon defines the Auto On/Off status: either Auto On/Off Enabled , or Disabled .
- Press the left directional button ◄ to toggle the status.
- Press the right directional button ► to move the cursor to the hour field. The auto ON time is shown on the left and the auto OFF time is shown on the right.
- Repeat the process for each field for both the ON time and the OFF time (hour, minute, and AM/PM if your pager is set to display time in the 12 hour mode).

- Press the FUNCTION/SELECT button ● to activate the Auto On/Off function.

The Auto On/Off indicator appears on the display if the Auto On/Off function has been enabled.

If the ON time is equal to the OFF time, the pager will not enable the auto On/Off function.

NOTE: To escape without making any changes, press the READ/RESET button .

OTHER FEATURES

Low Battery Alert: A low battery icon appears in place of the date at the onset of low battery conditions.

Duplicate Message: If the same message is received more than once, "DUPLICATE" appears at the beginning of your new message to indicate that your message has already been received. Your new message will contain the latest time stamp.

Out of Range: With this option installed, whenever you are too far away from your paging system's transmitter to reliably receive messages, your pager displays an "OUT OF RANGE" message and an out-of-range icon .

TIPS

Call diversion

If your ordinary phone is a PLUS phone, you can use the Call Diversion service to connect your call to your pager. You pay the paging charge every time someone rings.

To switch Call Diversion on:

1. Lift the receiver on your ordinary phone and dial *21*, then dial code 0746 followed by your paging number. Finish with #.
2. A recorded message confirms the connection. Replace the receiver.

To switch Call Diversion off:

1. Dial #21# on you ordinay phone.
2. A recorded message confirms.

Mobilsvar (=Voice Mailbox)

If you have an NMT or GSM mobile phone with a Telia Mobitel subscription, you can subscribe to the Mobilsvar, one of Telia Mobitel's value added services. Then Mobilsvar can be associated with your pager.

This means that—if someone has left a message for you—Mobilsvar calls your pager and your NMT or GSM number appears on the display.

Digital messages other than the telephone number

Instead of leaving his telephone number, the caller can leave another digital message. For example, you can agree with your wife/husbond that digital code 111 means you should buy some milk on the way home.

Instructions on your business card

On the back of your business card, you can write down brief instructions on how to page you. For example, you can use the following text:

To page me, dial 0746-<give your paging number for numeric paging> from a tone-dial telephone. Wait for the recorded message and then dial the number (including area code) which you want me to ring. Finish with #. Wait for the recorded message saying that paging is in progress, and then hang up. I will then call you.

You can also send a text message. Our switchbord operator <give telephone number> will gladly help you send a message to my pager on the following number <give your paging number for alphanumeric paging>.

Paging number in telephone directory

If you wish, you can have your paging number included in the telephone directory. Call TeleMedia customer service on 020-91 00 36.

Special Minicall Services

The Minicall system and Telia Mobitel also offer *Mobilsvar* (=Voice Mailbox), *Repeterad sökning* (=Repetition) and *Meddelandelagring* (=Message Storing) services. Talk to your dealer or call Telia Mobitel's Customer Service for companies on 90 350 for more information.

IF YOU HAVE ANY QUESTIONS

If you have any questions on your Minicall subscription, call Telia Mobitel's Customer Service for companies on 90 350.

If you have any questions on your Minicall pager, call Teli Service on 020-72 00 95.

TECHNICAL DATA

General: Pager for tone, numeric and alphanumceric paging on the Minicall system. Vibrator. Clock. Alarm signal. Backlighting. Time stamp.

Memory: Max. 20 characters per numeric message. Max. 400 characters per alphanumeric message. In total, 1200 characters can be stored. 20 messages can be stored, of which 10 can be locked.

Battery: 1 x 1.5 alkaline battery, type IEC LR03 (American standard AAA). Sufficient for 800 hours' operation.

Dimensions: 77 x 51 x 18 mm.

Weight: 72 g.

QUICK GUIDE

(continued from page 24)

- Lit=ON
- Flashing=Unread message
- Auto on/off

Audible alert

Turn off pager:
Press ●, move to , press ● twice.

Turn on pager: Press .

Change audible alert/vibration:
Press ●, move to /, press ●.

Set alert pattern:
Press ●, move to , press ●, move to desired pattern number, press ●.

Backlighting: Press ● for 1.5 sec.

Set alarm:
1. Press ●, move to , press ●.
2. If you want to change alarm status, press ◄.
3. Press ►. Scroll blinking field with ◄. Step to next field with ►.
4. Press ●.

Set auto on/off function:
1. Press ●, move to , press ●.
2. If you want to change ON to OFF or vice versa, press ◄.
3. Press ►. The ON time is displayed to the left, the OFF time is displayed to the right. Scroll blinking field with ◄. Step to next field with ►.
4. Press ●.